

## Universal Testing Machines Series (UH-I)

### POWER ON

1. Power ON




2. Pump ON



3. Press MANU



4. Sign is apparent

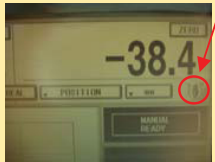

5. Turn this to OPEN



6. MANUAL is apparent




7. Turn this to HOLD




8. Press RETURN




9. MANUAL READY appears

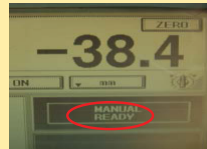


10. Press Force ZERO

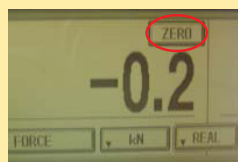


11. Wait Force = 0.000

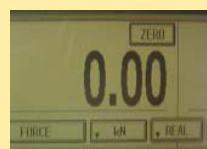

12. Adjust Analog INDI  
Press SYSTEM

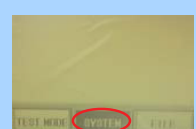

13. Press INDI.

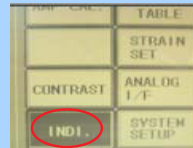


14. Press the arrows




till needle is zero




15. Doing E-CAL  
Press AMP CAL.

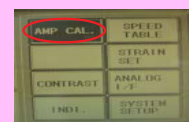


16. Press E-Cal

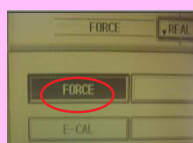

17. Press YES

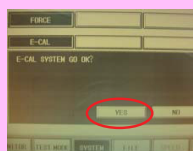

18. Wait 15 sec,  
Press Monitor & Zero

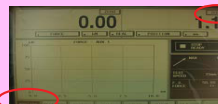

### POWER OFF


1. Press MANU



2. Sign is apparent



3. Turn this to RETURN

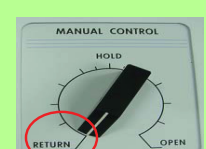

4. Wait till needle drops



5. Pump OFF



6. Power OFF



**BARA SCIENTIFIC**  
Solution of Success

Bara Scientific Co.,Ltd.  
U Chu Liang Building Floor 7  
968 Rama 4 Road Silom Bangrak  
Bangkok 10500 Thailand

**Testing Machines**

Khun : Suraphol J.

Tel. 662-6324300

Fax. 662-6375496-7